



# INSTALLATION

## STILETTO AXLE CAPS

## 1206

FITS: '00 AND UP DEUCE

PART#	INCLUDED
411206	2 Stiletto Axle Cap, Polished Chrome
200412	2 10-32 X 3/8" Stainless Steel Set Screw
411206W	1 Filler Washer
411206H	1 Long Hex Nut
301206	1 Instruction Sheet

### TOOLS SUGGESTED

3/4" Open end wrench and a 3/32" standard Allen wrench.

### PROCEDURE

- STEP 1** Remove the stock acorn nut from the right lower leg of your forks.
- STEP 2** Install included Long Hex Nut in place of the stock acorn nut and tighten firmly.
- STEP 3** Install the Filler Washer over the Long Hex Nut so the curved contour fits tight to your fork.
- STEP 4** Install Stiletto Axle Cap over the Long Hex Nut and push it tight up against the Filler Washer. Position the Axle Cap so the setscrew is facing downward and then tighten the setscrew.
- STEP 5** Position the left Axle Cap over the acorn nut so the setscrew is facing downward and then tighten the setscrew.

*Ride On!*

### E-MAIL

techsupport@kuryakyn.com  
or call 715.247.2983

### WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.


CONSEQUENTIAL DAMAGES:  
Kuryakyn shall not be liable for any consequential or incidental damages.

### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2003 Kuryakyn USA™ All Rights reserved.

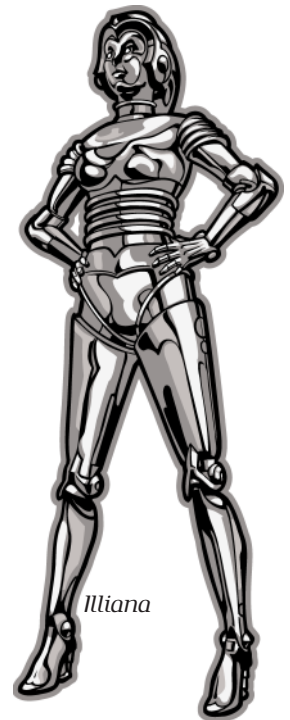

*Illiana*